


Pendant Modification Instructions for use with PD4600 Series

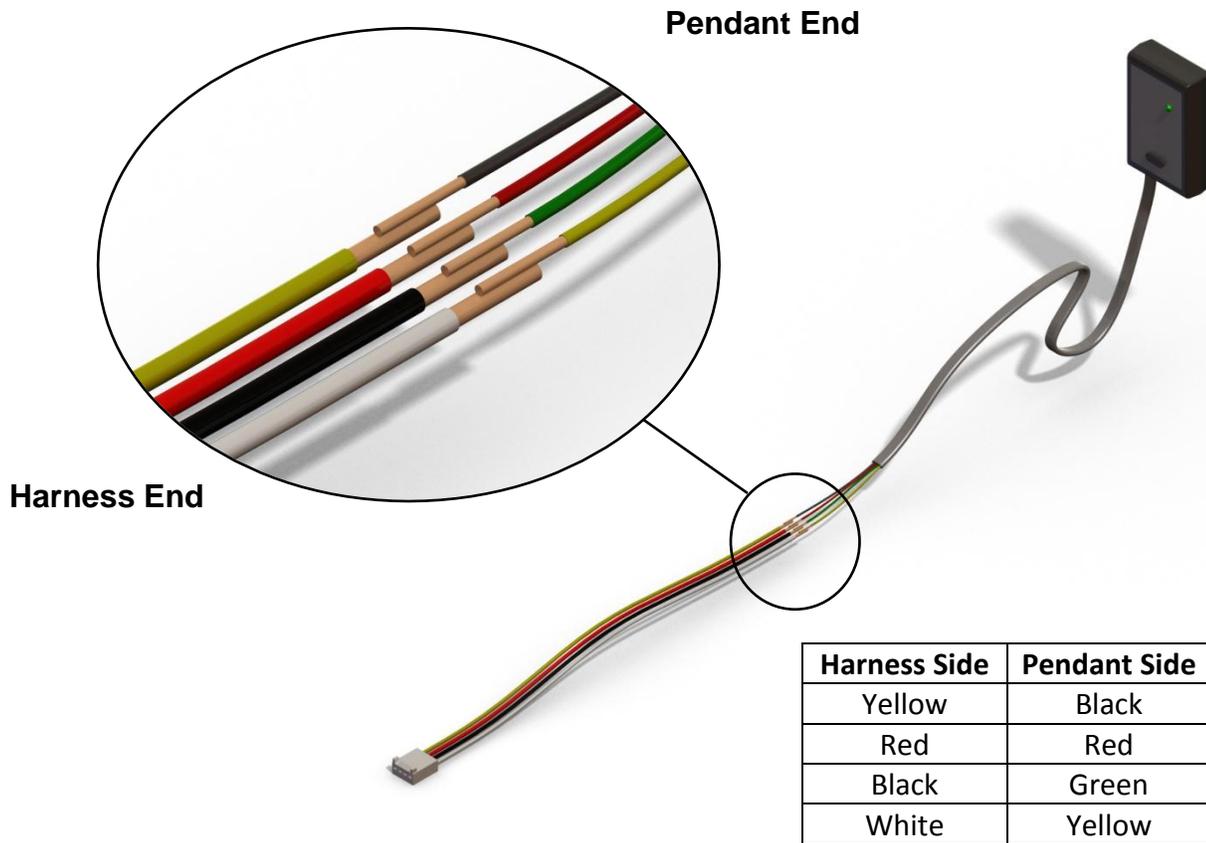

Directions

- 1) Cut harness supplied with your PD4600 in half
- 2) Cut telephone plug off pendant and strip outer insulation 2-3"
- 3) Strip harness and pendant wires 1/2"
- 4) Cut (4) 1" long pieces of 3/16" heat shrink tubing and slip over harness wires
- 5) Cut (1) 3" long piece of 1/2" heat shrink tubing and slip over pendant cable
- 6) Solder wires together as shown in illustration and table above
- 7) Secure solder joints with heat shrink tubing